


ACCESS DOOR

FEATURED PRODUCT

WEBB CORE, INC. DATA CENTER COLD AISLE CONTAINMENT SYSTEM

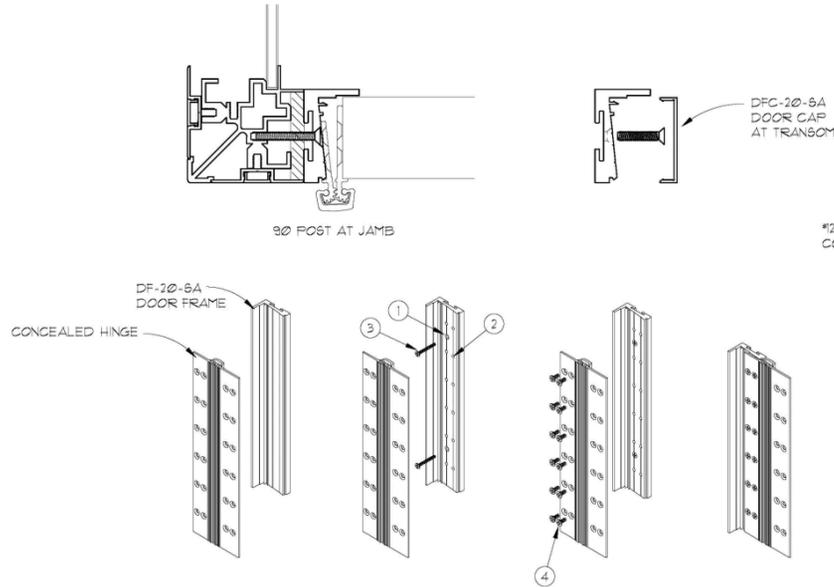

- ① 3/16" HOLES FOR ATTACHMENT TO WALL. PLACE 1/2" FROM EACH END OF MEMBER AND 1 1/2" TO 2" ABOVE AND BELOW HINGES CENTER IN MEMBER TO ALIGN WITH SCREW BOSS IN WALL FRAMING MEMBER. COUNTER-SINK HOLES FOR FLAT HEAD SCREWS.
- ② 3/16" HOLES FOR ATTACHMENT OF HINGES TO DOOR FRAME. USE GROOVES IN MEMBER TO ALIGN IN FRAME.
- ③ #10x1 1/2" FLAT HEAD TEK SELF TAPPING SCREW
- ④ USE SCREWS SUPPLIED BY CONTINUOUS HINGE MANUFACTURER TO ATTACH TO DOOR FRAME MEMBER

BEFORE INSTALLING THE DOOR, INSURE THAT THE DOOR JAMBS AND HEADER ARE INSTALLED PLUMB AND LEVEL.


PRE-DRILL HOLES FOR HINGES AND FRAME ATTACHMENT TO WALL FRAMING AS SHOWN.

PLACE THE DOOR AND FRAME IN OPENING AND USING CLAMPS OR OTHER TEMPORARY SECURING DEVICE, ADJUST THE FRAME SO THAT THE FRAME IS FLUSH WITH THE FINISH SURFACE OF THE CLEANROOM WALL.

ATTACH THE DOOR FRAME TO THE WALL FRAMING AS SHOWN ABOVE.

SNAP THE FRAME TRIM INTO PLACE AT TRANSOM LOCATION ONLY.

*12x35" FLAT HEAD SCREWS THROUGH CORNER MEMBER TO TRANSOM.

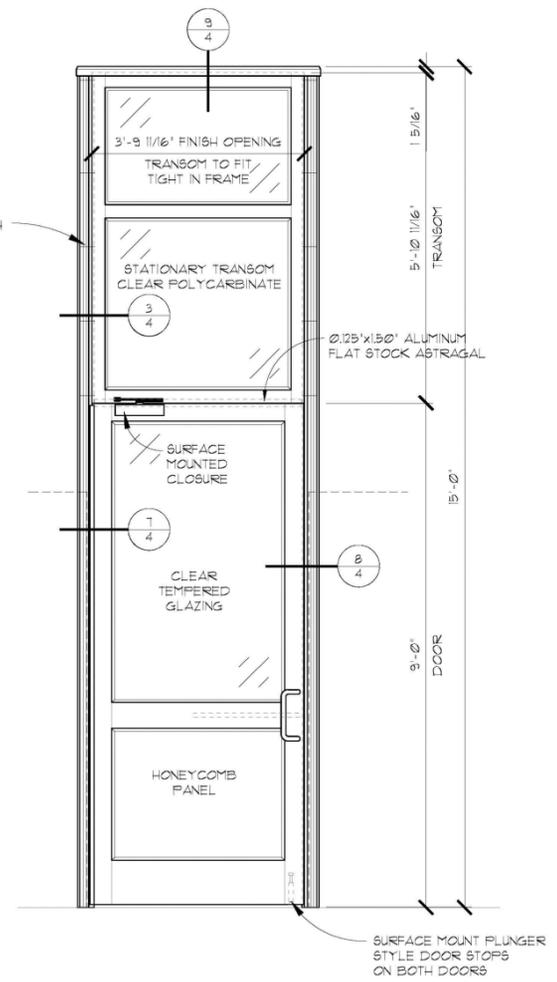

PH: 800-697-8062
FX: 503-981-2177
PORTLAND, OR
WEBBCORE.COM

THE DESIGN AND CONCEPTS REPRESENTED BY THIS PRINT AND ACCOMPANYING DOCUMENTS ARE THE SOLE PROPERTY OF WEBB CORE, INC. AND MAY NOT BE USED, COPIED, OR REPRODUCED WITHOUT PRIOR WRITTEN CONSENT OF SAID OFFICE.